# MFJ-945C VERSA TUNER II INSTRUCTIONS

Thank you very much for purchasing the MFJ-945C VERSA TUNER II.

## GENERAL INFORMATION

The MFJ-945C Versa Tuner II is designed to match virtually any transmitter (up to 300 watts RF power output) to almost any antenna. This includes dipoles, inverted vees, random wires, verticals, mobile whips, beams, and others fed by coax lines or single wire from 160 thru 10 meters. A 1:4 balun is built in for balanced lines. The MFJ-945C will monitor either SWR or RF transmitter power in two ranges, 30W or 300W.

## THE SWR/WATT METER

The SWR meter is sensitive down to approximately 5 watts RF output. The SWR reading will not be accurate for a transmitter power of less than 5 watts. To read RF transmitter output power, simply push the FWD/REF button in and set the SENS/POWER control to either 30 or 300. At position 30, the meter will read a maximum of 30 watts. At position 300, the meter will read a maximum of 300 watts.

To read SWR, depress the FWD/REF button and turn the SENS/POWER control for a full scale deflection of the meter. Release the FWD/REF button for the SWR reading. NOTE: The scale sensitivity must be reset for each power level to obtain an accurate reading.

To read reflected power set the FWD/REF button to REF (button out) and the SENS/POWER control to either 30 or 300.

## INSTALLATION

1. Install the MFJ-945C between the transmitter and the antenna. A coax line is connected between the transmitter and the SO-239 coax connector marked TRANSMITTER on the tuner.
2. Coax fed antenna must be connected to the SO-239 marked COAX.
3. Random wire antenna must be connected to the five-way binding post marked WIRE. The The random wire should be long, high, and as clear of surrounding objects as possible. Do not ground the random wire antenna and make sure that the tuner is will grounded to the transmitter. A five-way binding post, marked GND, is provided for ground connections. The wire antenna should be quarter wave length or longer at operating frequency.
4. Balanced line fed antenna must be connected to the two five-way binding posts marked BALANCED LINE, and a jumper wire connected from the left BALANCED LINE binding post to the WIRE binding post as indicated by the dotted line on the rear of the tuner. This couples the MFJ-945C to the balanced line through a 1:4 balun. NOTE: Either a balanced line or random wire antenna can be connected at one time. If a random wire antenna is used, make sure that there is not a jumper wire between WIRE and BALANCED LINE.
5. If mobile operation is desired, an optional mobile mounting bracket may be purchased from MFJ Enterprises, Inc. The mobile mounting bracket may be installed by first mounting the bracket to the selected location. Two #10-32 X 1/2" screws, two #10 lockwashers, and two #10 nuts are provided. Second, slide the MFJ-945C into the bracket and secure it with the four #6 X 3/8" sheet-metal screws also provided. Use one of the four flat-washers provided between the bracket and the bottom of the tuner for each of the four #6 sheet-metal screws. NOTE: Do not over-tighten the sheet-metal screws.

## USING THE MFJ-945C

The INDUCTANCE switch on the MFJ-945C presents a minimum of inductance at position A and a maximum of inductance at position L. Less inductance is needed at high frequencies than at low frequencies for the same impedance. The TRANSMITTER and ANTENNA controls both present a maximum of capacitance at position 1.

For optimum operation fo the MFJ-945C, the transmitter must be tuned for a 50 ohm output impedance for the frequency band in operation. The transmitter can be tuned for 50 ohm output impedance by connecting a 50 ohm dummy load at the transmitter output.

After properly tuning your transmitter, install the MFJ-945C as described in "INSTALLATION" Do not readjust the transmitter setting after loading it to the 50 ohm load. Use the following procedure to tune the MFJ-945C for minimum SWR.

1. Set the TRANSMITTER and ANTENNA controls to 3.5 (the capacitors are half opened).
2. Rotate the INDUCTANCE control until maximum noise is obtained in receiving mode.
3. With the FWD/REF switch pushed in and the SENS/POWER control set at 30, set the transmitter to the tune position or low power setting and transmit.
4. Turn the SENS/POWER control clockwise until a full-scale deflection is obtained. If a full-scale deflection cannot be obtained, increase the output power from the transmitter.
5. Let the FWD/REF switch out for the SWR reading.
6. If the SWR is not 1:1 then tune the MFJ-945C for minimum SWR.
7. While transmitting and with the INDUCTANCE control set the same as for Step 2, alternately adjust the TRANSMITTER and ANTENNA controls for a minimum SWR. Since the TRANSMITTER and ANTENNA controls interact, the two controls can best be adjusted by turning the TRANSMITTER control at a small increment at a time and then rotating the ANTENNA control for the minimum SWR.
   Repeat this until a minimum SWR is obtained.
8. If a SWR reading of 1:1 is not achieved, increase or decrease the INDUCTANCE control one position and repeat Step 7. CAUTION: If arcing between capacitor plates occured, increase or decrease the INDUCTANCE control one position and repeat Step 7. NOTE: If a SWR of 1:1 cannot be achieved at this point, repeat Step 7. for each INDUCTANCE control position. Again, do this in the tune mode or at low transmitter power.
9. After a minimum SWR is achieved, readjust the SWR swnsitivity by pushing the FWD/REF switch in and adjust for a full-scale deflection. Let out for the SWR reading. The transmitter power may now be increased up to 300W. The SWR sensitivity must be reset again after full power is applied. The TRANSMITTER and ANTENNA controls may need fine adjustment if the SWR is not 1:1 at high power. NOTE: On 160 M band, excessive heating or arcing may occur. Reduce the transmitter output power until it stops.
10. To read the transmitter output power, push the SWR/WATT control in and set it to either 30 or 300.
11. A SWR of 1:1 can occur from more than one set of control settings on the MFJ-945B. When a SWR of 1:1 is obtained, be sure to check the transmitter power and make sure that the transmitter power is relatively high. If the transmitter power has decrease substantially, try another INDUCTANCE control setting and repeat Step 7.
12. When using the MFJ-945C for receiving only, tune the MFJ-945C as described in Step 1 and Step 2.

## ADDITIONAL NOTES

The SENS/POWER control is factory calibrated for the 300W range. Do not reset the knob on this control. However, due to component tolerance when precision reading is desired, the 30W range can be recalibrated as follows: Push in the FWD/REF switch. Set the SENS/POWER control to 300, note the power level on the 300W scale, then rotate the control clockwise to read the same power level on the 30W scale. Mark the control setting for the recalibrated 30W range.

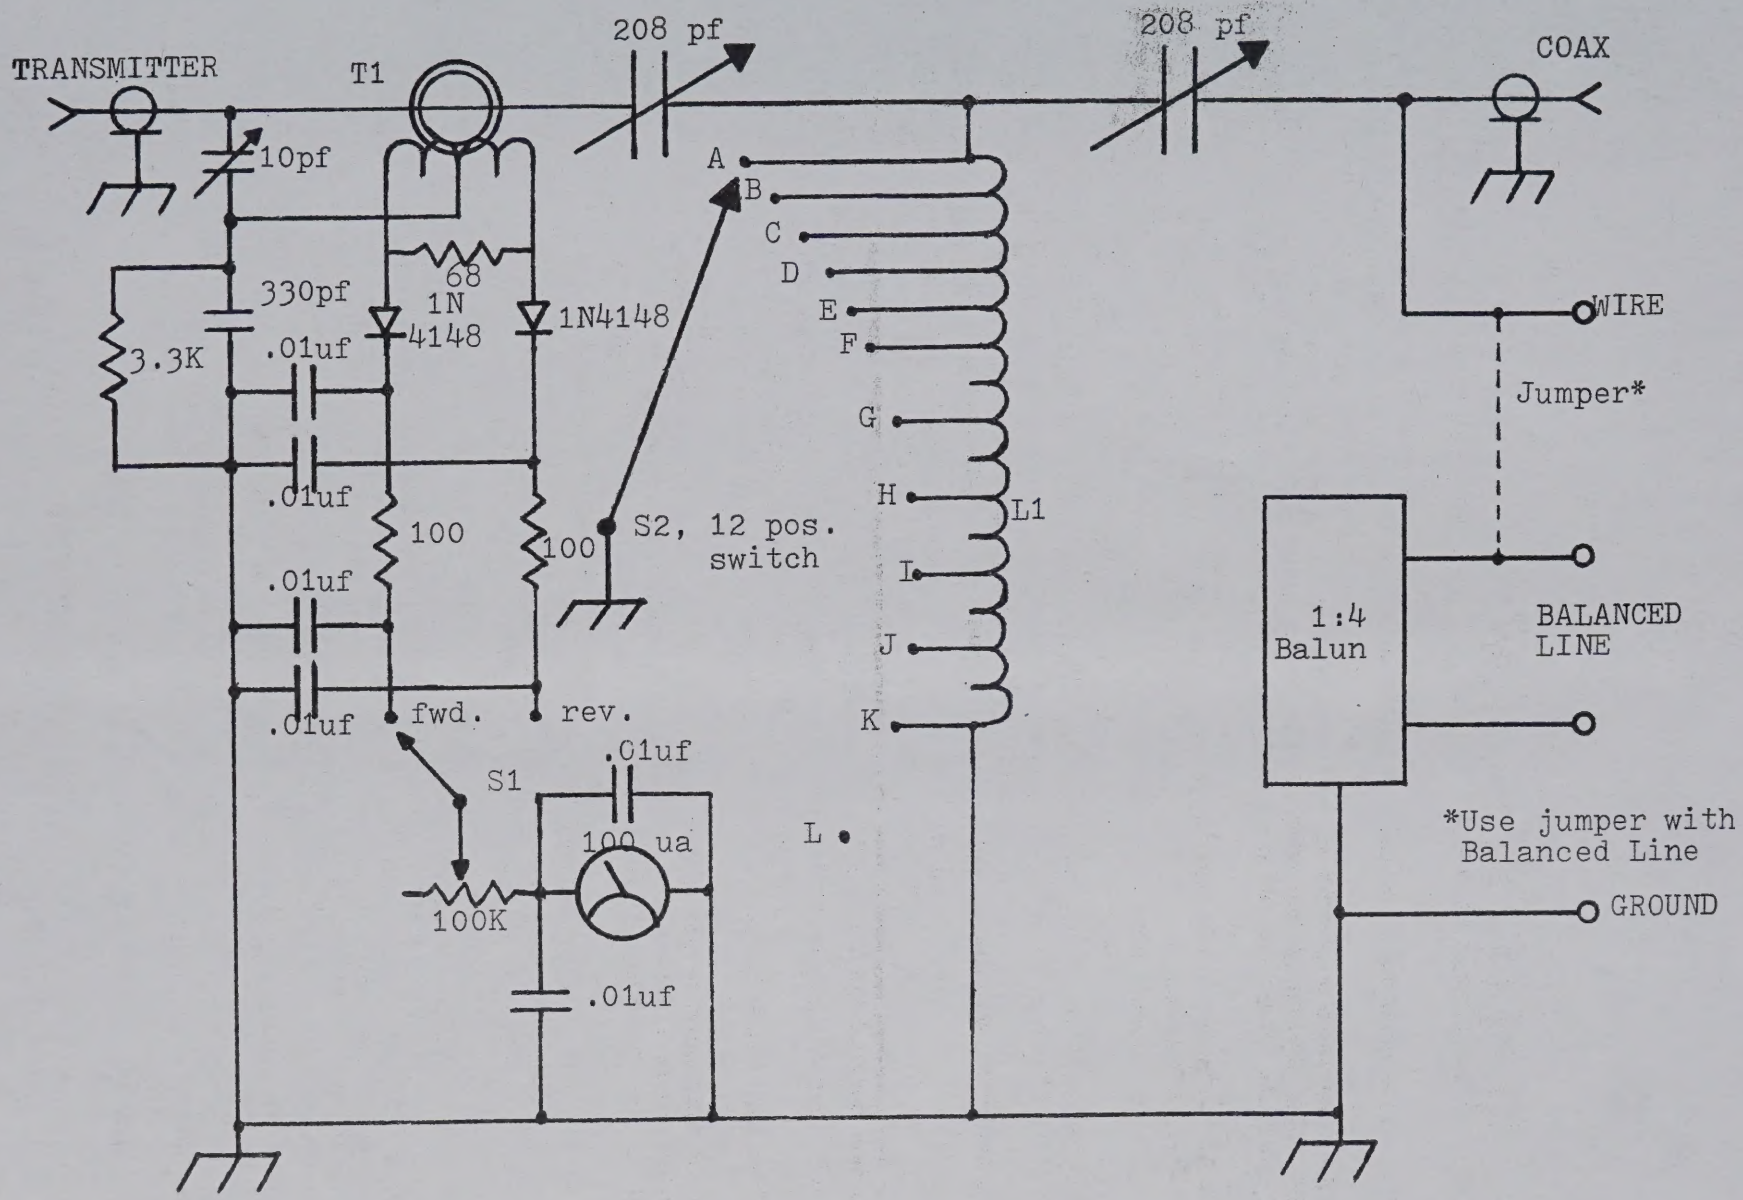


MFJ-945C CIRCUIT DIAGRAM

## FULL 12 MONTHS WARRANTY

MFJ Enterprises, Inc. warrants to the original owner of this product, if manufactured by MFJ Enterprises, Inc. and purchased from an authorized dealer or directly from MFJ Enterprises, Inc. to be free of defects in material and workmanship for a period of 12 months from date of purchase provided the following terms of this warranty are satisfied.

1. The purchaser must retain the dated proof-of-purchase (bill of sale, cancelled check, credit card or money order receipt, etc.) describing the product to establish the validity of warranty claim and must submit the original or a machine-reproduction of such proof-of-purchase to MFJ Enterprises, Inc. at the time of warranty service. MFJ Enterprises, Inc. shall have the discretion to deny warranty without dated proof-of-purchase. Any evidence of alteration, erasure, or forgery of proof-of-purchase shall be cause to void any and all warranty terms immediately.
2. MFJ Enterprises, Inc. agrees to repair or replace at MFJ's option without charge to the original owner any defective product provided the product is returned postage prepaid to MFJ Enterprises, Inc. with a personal check, cashier's check or money order for **$4.00** covering postage and handling.
3. MFJ Enterprises, Inc. will supply replacement parts free of charge for any MFJ product under warranty upon request. A dated proof-of-purchase and a **$4.00** personal check, cashier's check or money order must be provided to cover postage and handling.
4. This warranty is **NOT** void for owners who attempt to repair defective units. Technical consultation is available by calling (601) 323-5869.
5. This warranty does not apply to kits sold or manufactured by MFJ Enterprises, Inc.
6. Wired and tested PC board products are covered by this warranty provided **only the wired and tested PC board is returned.** Wired and tested PC boards installed in the owner's cabinet or connected to switches, jacks, cables, etc. sent to MFJ Enterprises, Inc. will be returned at the owner's expense unrepaired.
7. Under no circumstances is MFJ Enterprises, Inc. liable for consequential damages to person or property by the use of any MFJ product.
8. **Out-of-Warranty Service:** MFJ Enterprises, Inc. will repair any out-of-warranty product provided the unit is delivered prepaid. All charges will be shipped COD to the owner.
9. This warranty is given in lieu of any other warranty express or implied.
10. MFJ Enterprises, Inc. reserves the right to make changes or improvement in design or manufacture without incurring any obligation to install such changes upon any of the products previously manufactured.
11. All MFJ products to be serviced in-warranty or out-of-warranty should be addressed to **MFJ Enterprises, Inc., 921A Louisville Road, Starkville, Mississippi 39759, USA** and must be accompanied by a letter describing the problem in detail along with a copy of your dated proof-of-purchase.
12. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

# MFJ-949C VERSA TUNER II

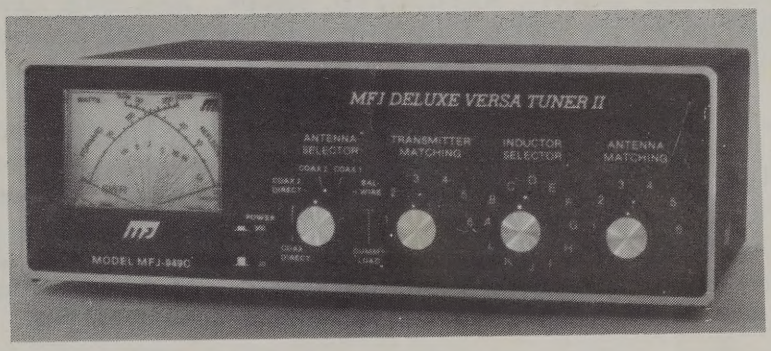


# MODEL MFJ-949C

## OWNER'S MANUAL

**CAUTION: Read All Instructions Before Operating Equipment.**


# MFJ ENTERPRISES, INC.

P. O. BOX 494, MISSISSIPPI STATE, MS. 39762, USA


© MFJ ENTERPRISES, INC.

# MFJ-949C DELUXE VERSA TUNER II INSTRUCTIONS

## GENERAL INFORMATION

The MFJ-949C is designed to match virtually any transmitter to almost any antenna, including dipoles, inverted vees, verticals, mobile whips, beams, random wires, and others fed by coax lines, balanced lines, or a single wire. A 1:4 balun is built in for connection to balanced lines. An sntenna selector switch provides versatile antenna selection. A 50 ohm dummy load is built in for easy transmitter tuning. The MFJ-949C will handle up to 300 watts of RF output power from the transmitter from 160 through 10 meters. The MFJ-949C employs a cross needle meter so forward power, reflected power, and SWR can be read simultaneously.

## THE SWR/WATTMETER

The meter on the MFJ-949C can be used with the tuner or by itself. To use the meter without the tuner, set the ANTENNA SELECTOR to Coax 1 Direct or Coax 2 Direct. The MFJ-949C utilizes a cross needle meter so FORWARD power, REFLECTED power, and SWR can be simultaneously. The range for both FORWARD and REFLECTED power is either 30 watts or 300 watts. It will read SWR of 1.1 to 5.

To read transmitter RF output power, set the desired range of either 30 watts or 300 watts. Transmit a steady carrier and read the FORWARD power on the FORWARD scale and the REFLECTED power on the REFLECTED scale. SWR is indicated by the crossing point of the two needles. While transmitting, read SWR from the SWR line nearest the crossing point. The meter lamp can be power by a 12V DC source. Use a 2.5mm plug with the tip of the plug connected to the positive.

## THE ANTENNA SELECTOR

The ANTENNA SELECTOR switch alows selecting two coax antennas either direct of through the tuner, a balanced line atnenna or wire antenna or a built-in 50 ohm dummy load. The 50 ohm dummy load is rated at 300 watts. CAUTION: DO NOT continously key for more than 2 minutes at a time. DO NOT operate the antenna switch while transmitting. DO NOT use the MFJ-949C for over 300 watts of RF output power, even in the Direct Coax or Dummy Load positions.

## INSTALLATION

1. Install the MFJ-949C between the transmitter and the antennas. A coax line is connected to the transmitter and the SO-239 coax connector marked TRANSMITTER on the tuner.

3. MITTER and ANTENNA controls interact, the two controls can best be adjusted by turning the TRANSMITTER control a small increment at a time and the rotating the ANTENNA control for the minimum SWR. Repeat this until a minimum SWR is obtained.

4. If a SWR reading of 1:1 is not achieved, increase or decrease the INDUCTOR control on position and repeat Step 3. CAUTION: If arcing between capacitor plates occurs, increase or decrease the INDUCTOR control one position and repeat Step 3. NOTE: If a SWR 1:1 cannot be achieved at this point, repeat Step 3 for each INDUCTOR control position. Again, do this in the tune mode or at a low transmitter power.

5. After a minimum SWR is achieved, the transmitter power may now be increased up to 300 watts. This tuner will reduce the SWR of most antenna systems to nearly 1:1 . However in some cases a 1:1 SWR may not be achievable. If this happens, try increasing or decreasing length of antenna. Note that a 1.5:1 SWR results only in 4% reflected power and 11% reflected power with a SWR of 2:1.

6. A SWR of 1:1 can occur from more than one set of control settings on the MFJ-949C. When a SWR of 1:1 is obtained, be sure to check the transmitter power and make sure that the transmitter power is relatively high. If the transmitter power has decreased substantially, try another INDUCTOR control setting and repeat Step 3.

7. When using the MFJ-949C for receiving only, tune the MFJ-949C as described in Step 1 and Step2.

2. One or two coax fed antenna may be connected to the SO-239 coax connectors marked Coax 1 and Coax 2. NOTE: Coax 1 and Coax 2 antennas can be connected directly to the transmitter and by-passing the tuner by setting ANT. Selector to Coax 1 Direct or Coax 2 Direct, respectively.

3. A random wire antenna may be connected to the five-way binding post marked WIRE. The random wire should be long, high, and as clear of surrounding objects as possible. For optimum operation, length of random wire antenna should be quarter wave or longer of the operating frequency. Do not ground the random wire antenna. Make sure that the tuner is well grounded to the transmitter. A five-way binding post marked GROUND is provided for ground connection.

4. A balanced line fed antenna may be connected to the two five-way binding posts marked BALANCED LINE. A jumper wire from the WIRE binding post, as indicated by a dotted line on the MFJ-949C, should be connected to one of the post of the BALANCED LINE. This couples the MFJ-949C to the balanced line through a 1:4 balun.
NOTE: Either a balanced line or random wire antenna can be connected at one time. If a random wire antenna is used, make sure that there is not a jumper wire between WIRE and BALANCED LINE.

## USING THE MFJ-949C

The INDUCTOR switch on the MFJ-949C represents a minimum of inductance at positionA and a maximum of inductance at position L. Less inductance is needed at high frequencies than at low frequencies for the same impedence. The TRANSMITTER and ANTENNA controls both represent a maximum of capacitance at position 6. For optimum operation of the MFJ-949C, the transmitter must be tuned for a 50 ohm output impedence for the frequency band in operation. Set ANT. SELECTOR switch to Dummy Load for tuning up the transmitter.
NOTE: Always tune the transmitter at a low output power.

After properly tuning the transmitter, set Antenna Selector to the desired antenna and tune the tuner for a minimum SWR as descirbed below. DO NOT readjust the transmitter loading control setting after loading it to the 50 ohm load.

1. Set the TRANSMITTER and ANTENNA controls to 3.5 (The capacitors are half-opened).

2. Rotate the INDUCTOR control until maximum noise is obtained with your transceiver in the receiving mode.

3. While transmitting and with the INDUCTOR control set the same as for step 2, alternately adjust the TRANSMITTER and ANTENNA controls for a minimum SWR. Since the TRANS-

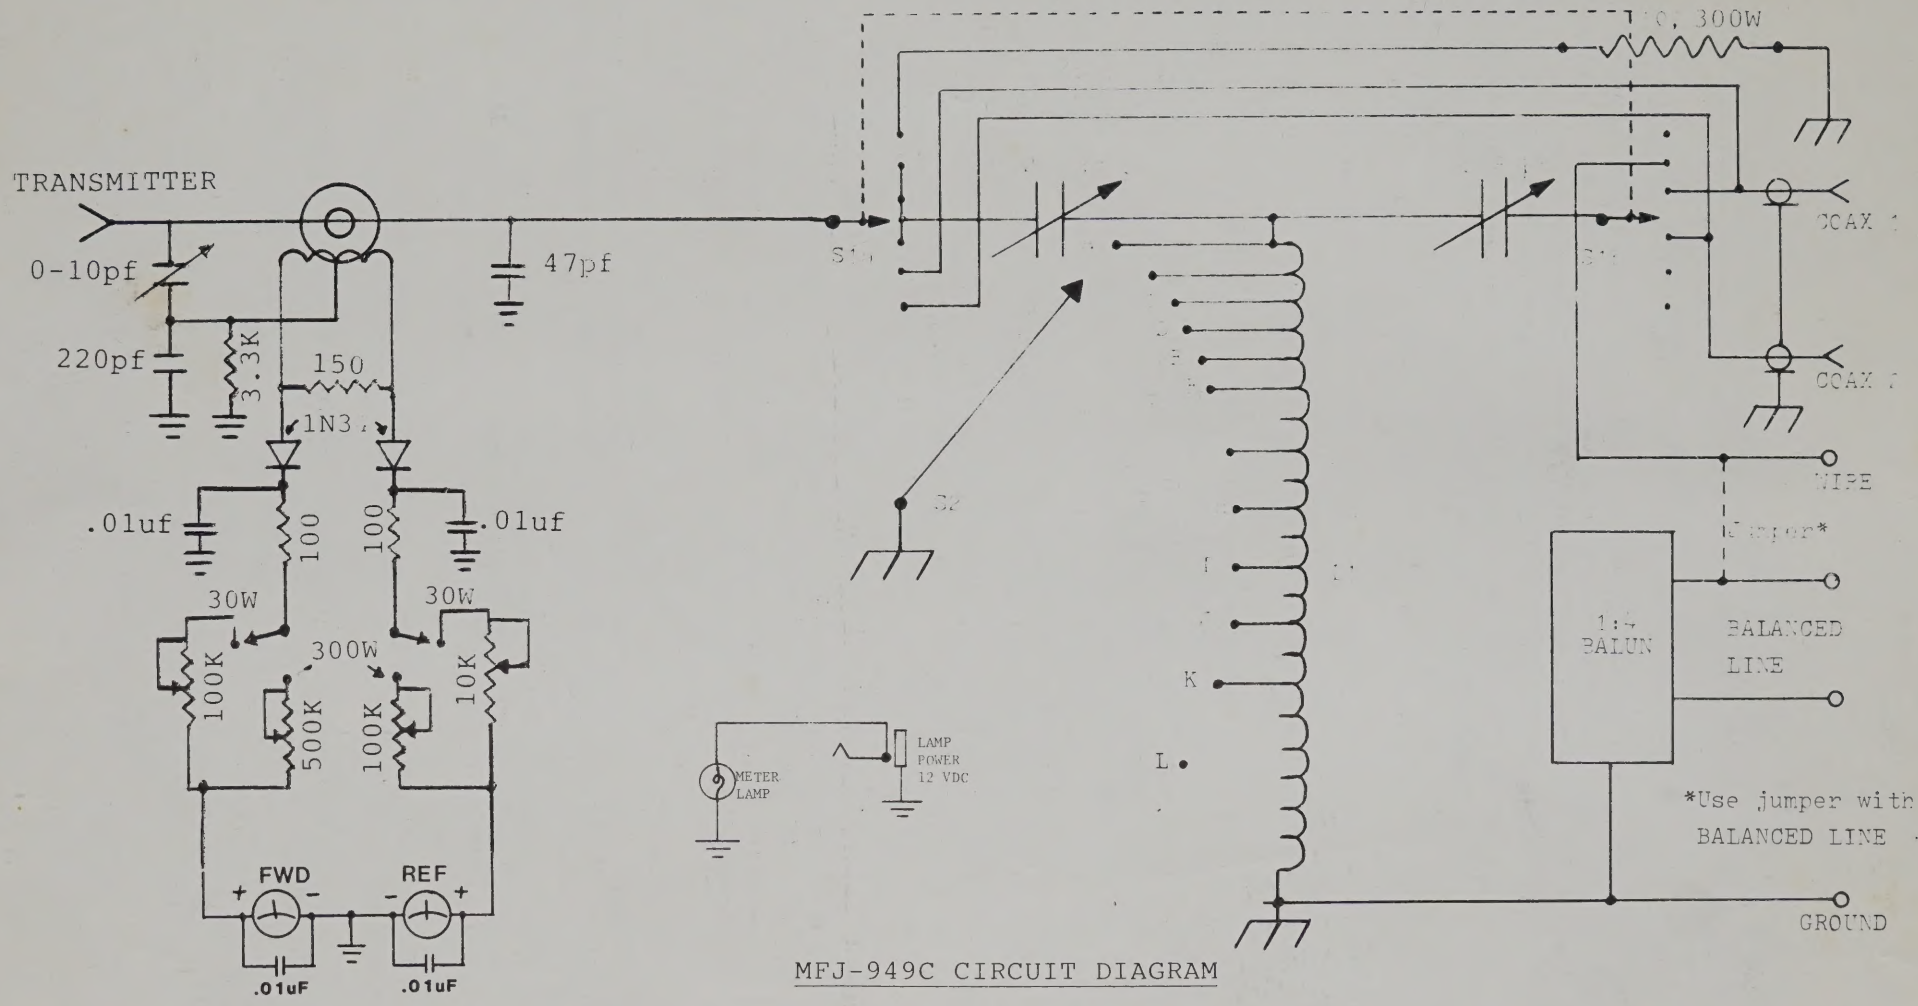


MFJ-949C CIRCUIT DIAGRAM

## FULL 12 MONTHS WARRANTY

MFJ Enterprises, Inc. warrants to the original owner of this product, if manufactured by MFJ Enterprises, Inc. and purchased from an authorized dealer or directly from MFJ Enterprises, Inc. to be free of defects in material and workmanship for a period of 12 months from date of purchase provided the following terms of this warranty are satisfied.

1. The purchaser must retain the dated proof-of-purchase (bill of sale, cancelled check, credit card or money order receipt, etc.) describing the product to establish the validity of warranty claim and must submit the original or a machine-reproduction of such proof-of-purchase to MFJ Enterprises, Inc. at the time of warranty service. MFJ Enterprises, Inc. shall have the discretion to deny warranty without dated proof-of-purchase. Any evidence of alteration, erasure, or forgery of proof-of-purchase shall be cause to void any and all warranty terms immediately.
2. MFJ Enterprises, Inc. agrees to repair or replace at MFJ's option without charge to the original owner any defective product provided the product is returned postage prepaid to MFJ Enterprises, Inc. with a personal check, cashier's check or money order for **$4.00** covering postage and handling.
3. MFJ Enterprises, Inc. will supply replacement parts free of charge for any MFJ product under warranty upon request. A dated proof-of-purchase and a **$4.00** personal check, cashier's check or money order must be provided to cover postage and handling.
4. This warranty is **NOT** void for owners who attempt to repair defective units. Technical consultation is available by calling (601) 323-5869.
5. This warranty does not apply to kits sold or manufactured by MFJ Enterprises, Inc.
6. Wired and tested PC board products are covered by this warranty provided **only the wired and tested PC board is returned.** Wired and tested PC boards installed in the owner's cabinet or connected to switches, jacks, cables, etc. sent to MFJ Enterprises, Inc. will be returned at the owner's expense unrepaired.
7. Under no circumstances is MFJ Enterprises, Inc. liable for consequential damages to person or property by the use of any MFJ product.
8. **Out-of-Warranty Service:** MFJ Enterprises, Inc. will repair any out-of-warranty product provided the unit is delivered prepaid. All charges will be shipped COD to the owner.
9. This warranty is given in lieu of any other warranty express or implied.
10. MFJ Enterprises, Inc. reserves the right to make changes or improvement in design or manufacture without incurring any obligation to install such changes upon any of the products previously manufactured.
11. All MFJ products to be serviced in-warranty or out-of-warranty should be addressed to **MFJ Enterprises, Inc., 921A Louisville Road, Starkville, Mississippi 39759, USA** and must be accompanied by a letter describing the problem in detail along with a copy of your dated proof-of-purchase.
12. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

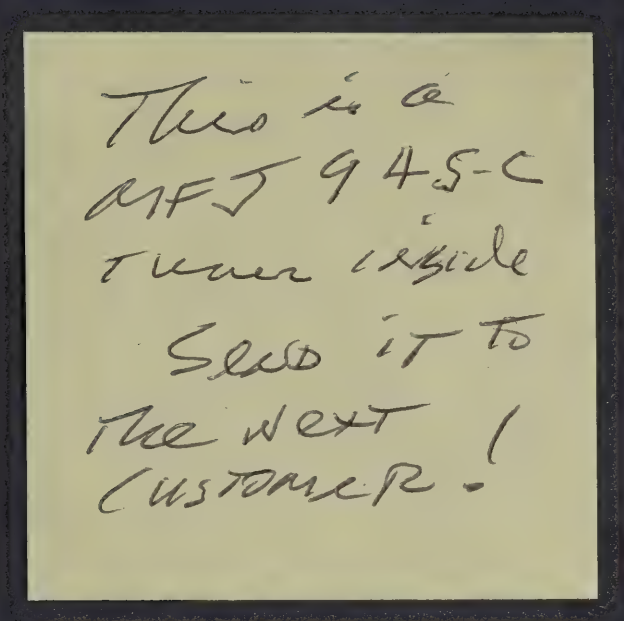
This is a
MFJ 945-C
tuner inside
Send it to
the next
customer!

41
USA
GRAYS HARBOR, WASHINGTON

Thank you
Fred!
John Troia

W4QCF MANUALS
66 Willowbrook Rd.
Asheville, NC 28805-1431
www.w4qcfmanuals.com

# MFJ-945C VERSA TUNER II INSTRUCTIONS

Thank you very much for purchasing the MFJ-945C VERSA TUNER II.

## GENERAL INFORMATION

The MFJ-945C Versa Tuner II is designed to match virtually any transmitter (up to 300 watts RF power output) to almost any antenna. This includes dipoles, inverted vees, random wires, verticals, mobile whips, beams, and others fed by coax lines or single wire from 160 thru 10 meters. A 1:4 balun is built in for balanced lines. The MFJ-945C will monitor either SWR or RF transmitter power in two ranges, 30W or 300W.

## THE SWR/WATT METER

The SWR meter is sensitive down to approximately 5 watts RF output. The SWR reading will not be accurate for a transmitter power of less than 5 watts. To read RF transmitter output power, simply push the FWD/REF button in and set the SENS/POWER control to either 30 or 300. At position 30, the meter will read a maximum of 30 watts. At position 300, the meter will read a maximum of 300 watts.

To read SWR, depress the FWD/REF button and turn the SENS/POWER control for a full scale deflection of the meter. Release the FWD/REF button for the SWR reading. NOTE: The scale sensitivity must be reset for each power level to obtain an accurate reading.

To read reflected power set the FWD/REF button to REF (button out) and the SENS/POWER control to either 30 or 300.

## INSTALLATION

1. Install the MFJ-945C between the transmitter and the antenna. A coax line is connected between the transmitter and the SO-239 coax connector marked TRANSMITTER on the tuner.
2. Coax fed antenna must be connected to the SO-239 marked COAX.
3. Random wire antenna must be connected to the five-way binding post marked WIRE. The The random wire should be long, high, and as clear of surrounding objects as possible. Do not ground the random wire antenna and make sure that the tuner is will grounded to the transmitter. A five-way binding post, marked GND, is provided for ground connections. The wire antenna should be quarter wave length or longer at operating frequency.
4. Balanced line fed antenna must be connected to the two five-way binding posts marked BALANCED LINE, and a jumper wire connected from the left BALANCED LINE binding post to the WIRE binding post as indicated by the dotted line on the rear of the tuner. This couples the MFJ-945C to the balanced line through a 1:4 balun. NOTE: Either a balanced line or random wire antenna can be connected at one time. If a random wire antenna is used, make sure that there is not a jumper wire between WIRE and BALANCED LINE.
5. If mobile operation is desired, an optional mobile mounting bracket may be purchased from MFJ Enterprises, Inc. The mobile mounting bracket may be installed by first mounting the bracket to the selected location. Two #10-32 X 1/2" screws, two #10 lockwashers, and two #10 nuts are provided. Second, slide the MFJ-945C into the bracket and secure it with the four #6 X 3/8" sheet-metal screws also provided. Use one of the four flat-washers provided between the bracket and the bottom of the tuner for each of the four #6 sheet-metal screws. NOTE: Do not over-tighten the sheet-metal screws.

## USING THE MFJ-945C

The INDUCTANCE switch on the MFJ-945C presents a minimum of inductance at position A and a maximum of inductance at position L. Less inductance is needed at high frequencies than at low frequencies for the same impedance. The TRANSMITTER and ANTENNA controls both present a maximum of capacitance at position 1.

For optimum operation fo the MFJ-945C, the transmitter must be tuned for a 50 ohm output impedance for the frequency band in operation. The transmitter can be tuned for 50 ohm output impedance by connecting a 50 ohm dummy load at the transmitter output.

After properly tuning your transmitter, install the MFJ-945C as described in "INSTALLATION". Do not readjust the transmitter setting after loading it to the 50 ohm load. Use the following procedure to tune the MFJ-945C for minimum SWR.

1. Set the TRANSMITTER and ANTENNA controls to 3.5 (the capacitors are half opened).
2. Rotate the INDUCTANCE control until maximum noise is obtained in receiving mode.
3. With the FWD/REF switch pushed in and the SENS/POWER control set at 30, set the transmitter to the tune position or low power setting and transmit.
4. Turn the SENS/POWER control clockwise until a full-scale deflection is obtained. If a full-scale deflection cannot be obtained, increase the output power from the transmitter.
5. Let the FWD/REF switch out for the SWR reading.
6. If the SWR is not 1:1 then tune the MFJ-945C for minimum SWR.
7. While transmitting and with the INDUCTANCE control set the same as for Step 2, alternately adjust the TRANSMITTER and ANTENNA controls for a minimum SWR. Since the TRANSMITTER and ANTENNA controls interact, the two controls can best be adjusted by turning the TRANSMITTER control at a small increment at a time and then rotating the ANTENNA control for the minimum SWR.
   Repeat this until a minimum SWR is obtained.
8. If a SWR reading of 1:1 is not achieved, increase or decrease the INDUCTANCE control one position and repeat Step 7. CAUTION: If arcing between capacitor plates occured, increase or decrease the INDUCTANCE control one position and repeat Step 7. NOTE: If a SWR of 1:1 cannot be achieved at this point, repeat Step 7.for each INDUCTANCE control position. Again, do this in the tune mode or at low transmitter power.
9. After a minimum SWR is achieved, readjust the SWR swnsitivity by pushing the FWD/REF switch in and adjust for a full-scale deflection. Let out for the SWR reading. The transmitter power may now be increased up to 300W. The SWR sensitivity must be reset again after full power is applied. The TRANSMITTER and ANTENNA controls may need fine adjustment if the SWR is not 1:1 at high power. NOTE: On 160 M band, excessive heating or arcing may occur. Reduce the transmitter output power until it stops.
10. To read the transmitter output power, push the SWR/WATT control in and set it to either 30 or 300.
11. A SWR of 1:1 can occur from more than one set of control settings on the MFJ-945B. When a SWR of 1:1 is obtained, be sure to check the transmitter power and make sure that the transmitter power is relatively high. If the transmitter power has decrease substantially, try another INDUCTANCE control setting and repeat Step 7.
12. When using the MFJ-945C for receiving only, tune the MFJ-945C as described in Step 1 and Step 2.

## ADDITIONAL NOTES

The SENS/POWER control is factory calibrated for the 300W range. Do not reset the knob on this control. However, due to component tolerance when precision reading is desired, the 30W range can be recalibrated as follows: Push in the FWD/REF switch. Set the SENS/POWER control to 300, note the power level on the 300W scale, then rotate the control clockwise to read the same power level on the 30W scale. Mark the control setting for the recalibrated 30W range.

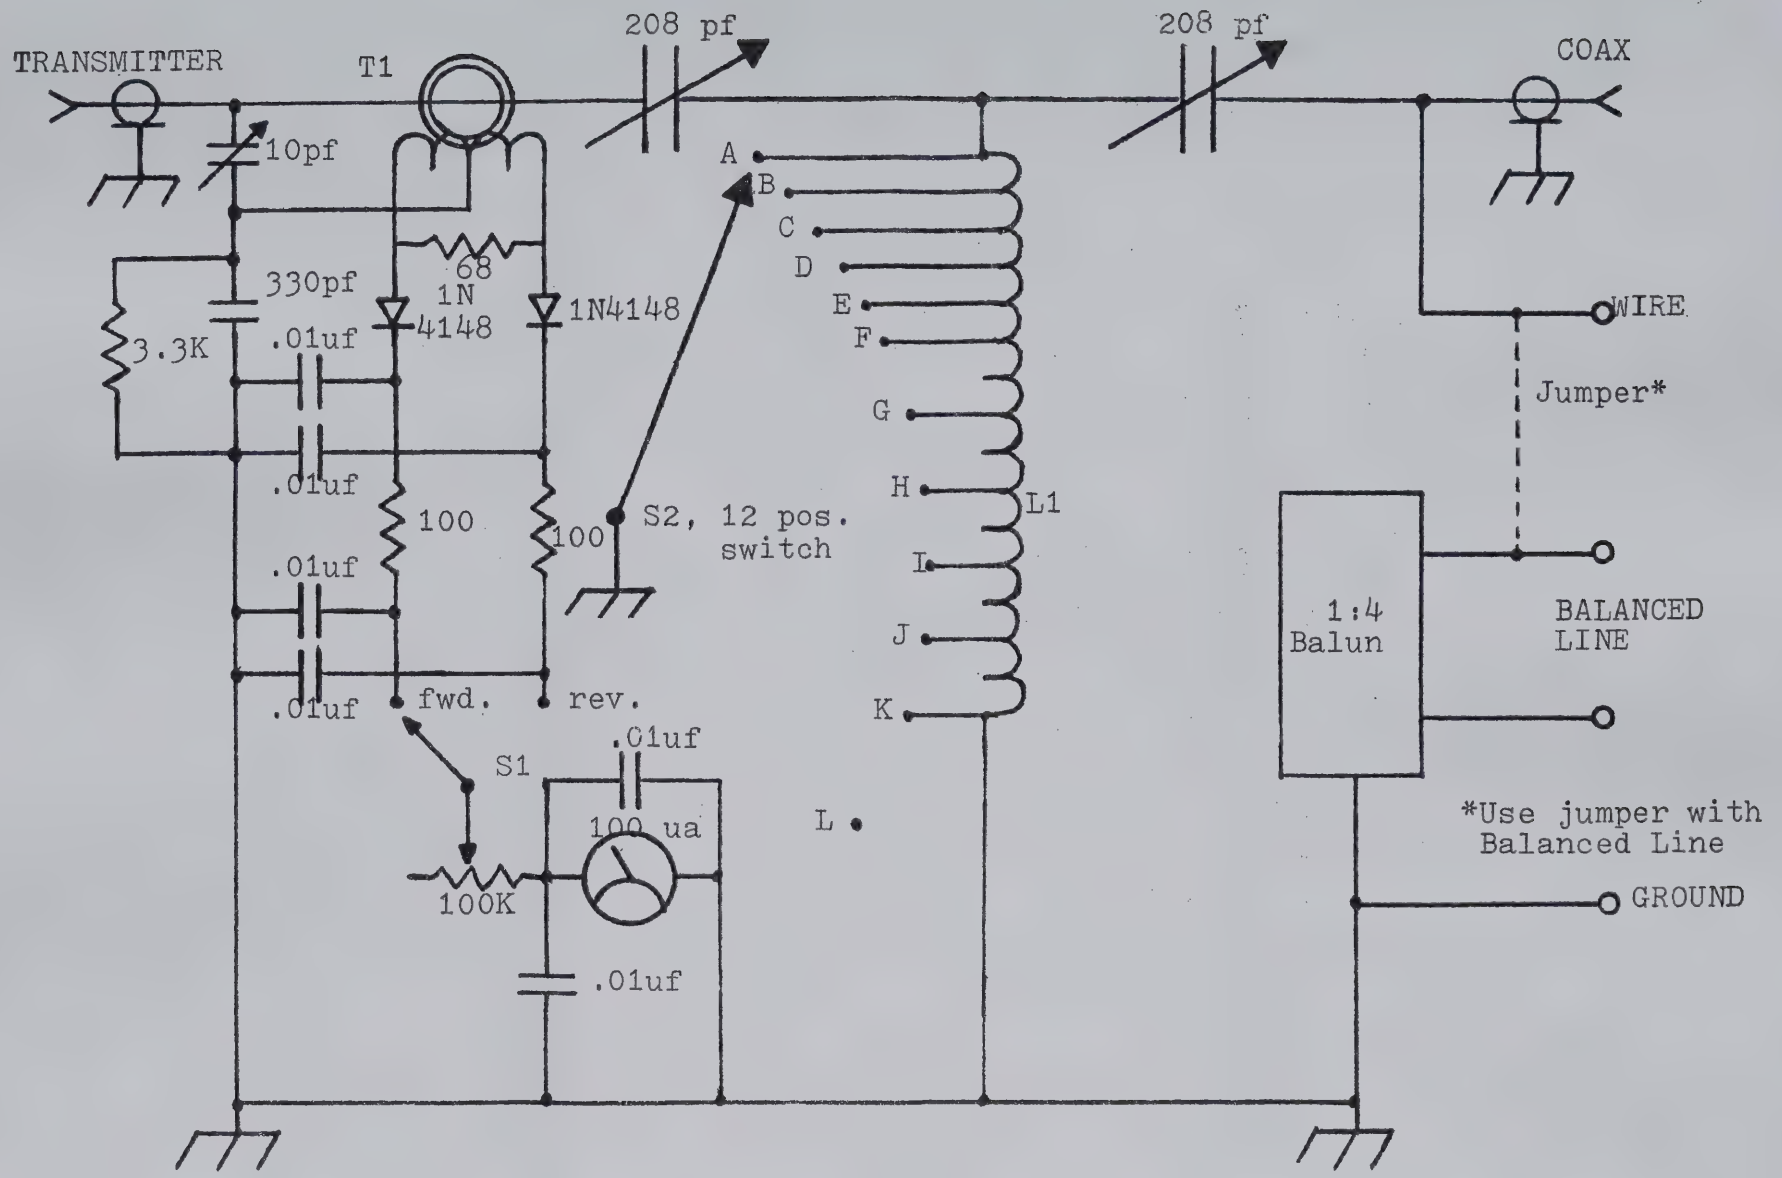


MFJ-945C CIRCUIT DIAGRAM

## FULL 12 MONTHS WARRANTY

MFJ Enterprises, Inc. warrants to the original owner of this product, if manufactured by MFJ Enterprises, Inc. and purchased from an authorized dealer or directly from MFJ Enterprises, Inc. to be free of defects in material and workmanship for a period of 12 months from date of purchase provided the following terms of this warranty are satisfied.

1. The purchaser must retain the dated proof-of-purchase (bill of sale, cancelled check, credit card or money order receipt, etc.) describing the product to establish the validity of warranty claim and must submit the original or a machine-reproduction of such proof-of-purchase to MFJ Enterprises, Inc. at the time of warranty service. MFJ Enterprises, Inc. shall have the discretion to deny warranty without dated proof-of-purchase. Any evidence of alteration, erasure, or forgery of proof-of-purchase shall be cause to void any and all warranty terms immediately.
2. MFJ Enterprises, Inc. agrees to repair or replace at MFJ's option without charge to the original owner any defective product provided the product is returned postage prepaid to MFJ Enterprises, Inc. with a personal check, cashier's check or money order for **$4.00** covering postage and handling.
3. MFJ Enterprises, Inc. will supply replacement parts free of charge for any MFJ product under warranty upon request. A dated proof-of-purchase and a **$4.00** personal check, cashier's check or money order must be provided to cover postage and handling.
4. This warranty is **NOT** void for owners who attempt to repair defective units. Technical consultation is available by calling (601) 323-5869.
5. This warranty does not apply to kits sold or manufactured by MFJ Enterprises, Inc.
6. Wired and tested PC board products are covered by this warranty provided **only the wired and tested PC board is returned.** Wired and tested PC boards installed in the owner's cabinet or connected to switches, jacks, cables, etc. sent to MFJ Enterprises, Inc. will be returned at the owner's expense unrepaired.
7. Under no circumstances is MFJ Enterprises, Inc. liable for consequential damages to person or property by the use of any MFJ product.
8. **Out-of-Warranty Service:** MFJ Enterprises, Inc. will repair any out-of-warranty product provided the unit is delivered prepaid. All charges will be shipped COD to the owner.
9. This warranty is given in lieu of any other warranty express or implied.
10. MFJ Enterprises, Inc. reserves the right to make changes or improvement in design or manufacture without incurring any obligation to install such changes upon any of the products previously manufactured.
11. All MFJ products to be serviced in-warranty or out-of-warranty should be addressed to **MFJ Enterprises, Inc., 921A Louisville Road, Starkville, Mississippi 39759, USA** and must be accompanied by a letter describing the problem in detail along with a copy of your dated proof-of-purchase.
12. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

# MFJ-945C VERSA TUNER II INSTRUCTIONS

Thank you very much for purchasing the MFJ-945C VERSA TUNER II.

## GENERAL INFORMATION

The MFJ-945C Versa Tuner II is designed to match virtually any transmitter (up to 300 watts RF power output) to almost any antenna. This includes dipoles, inverted vees, random wires, verticals, mobile whips, beams, and others fed by coax lines or single wire from 160 thru 10 meters. A 1:4 balun is built in for balanced lines. The MFJ-945C will monitor either SWR or RF transmitter power in two ranges, 30W or 300W.

## THE SWR/WATT METER

The SWR meter is sensitive down to approximately 5 watts RF output. The SWR reading will not be accurate for a transmitter power of less than 5 watts. To read RF transmitter output power, simply push the FWD/REF button in and set the SENS/POWER control to either 30 or 300. At position 30, the meter will read a maximum of 30 watts. At position 300, the meter will read a maximum of 300 watts.

To read SWR, depress the FWD/REF button and turn the SENS/POWER control for a full scale deflection of the meter. Release the FWD/REF button for the SWR reading. NOTE: The scale sensitivity must be reset for each power level to obtain an accurate reading.

To read reflected power set the FWD/REF button to REF (button out) and the SENS/POWER control to either 30 or 300.

## INSTALLATION

1. Install the MFJ-945C between the transmitter and the antenna. A coax line is connected between the transmitter and the SO-239 coax connector marked TRANSMITTER on the tuner.
2. Coax fed antenna must be connected to the SO-239 marked COAX.
3. Random wire antenna must be connected to the five-way binding post marked WIRE. The The random wire should be long, high, and as clear of surrounding objects as possible. Do not ground the random wire antenna and make sure that the tuner is will grounded to the transmitter. A five-way binding post, marked GND, is provided for ground connections. The wire antenna should be quarter wave length or longer at operating frequency.
4. Balanced line fed antenna must be connected to the two five-way binding posts marked BALANCED LINE, and a jumper wire connected from the left BALANCED LINE binding post to the WIRE binding post as indicated by the dotted line on the rear of the tuner. This couples the MFJ-945C to the balanced line through a 1:4 balun. NOTE: Either a balanced line or random wire antenna can be connected at one time. If a random wire antenna is used, make sure that there is not a jumper wire between WIRE and BALANCED LINE.
5. If mobile operation is desired, an optional mobile mounting bracket may be purchased from MFJ Enterprises, Inc. The mobile mounting bracket may be installed by first mounting the bracket to the selected location. Two #10-32 X 1/2" screws, two #10 lockwashers, and two #10 nuts are provided. Second, slide the MFJ-945C into the bracket and secure it with the four #6 X 3/8" sheet-metal screws also provided. Use one of the four flat-washers provided between the bracket and the bottom of the tuner for each of the four #6 sheet-metal screws. NOTE: Do not over-tighten the sheet-metal screws.

## USING THE MFJ-945C

The INDUCTANCE switch on the MFJ-945C presents a minimum of inductance at position A and a maximum of inductance at position L. Less inductance is needed at high frequencies than at low frequencies for the same impedance. The TRANSMITTER and ANTENNA controls both present a maximum of capacitance at position 1.

For optimum operation fo the MFJ-945C, the transmitter must be tuned for a 50 ohm output impedance for the frequency band in operation. The transmitter can be tuned for 50 ohm output impedance by connecting a 50 ohm dummy load at the transmitter output.

After properly tuning your transmitter, install the MFJ-945C as described in "INSTALLATION". Do not readjust the transmitter setting after loading it to the 50 ohm load. Use the following procedure to tune the MFJ-945C for minimum SWR.

1. Set the TRANSMITTER and ANTENNA controls to 3.5 (the capacitors are half opened).
2. Rotate the INDUCTANCE control until maximum noise is obtained in receiving mode.
3. With the FWD/REF switch pushed in and the SENS/POWER control set at 30, set the transmitter to the tune position or low power setting and transmit.
4. Turn the SENS/POWER control clockwise until a full-scale deflection is obtained. If a full-scale deflection cannot be obtained, increase the output power from the transmitter.
5. Let the FWD/REF switch out for the SWR reading.
6. If the SWR is not 1:1 then tune the MFJ-945C for minimum SWR.
7. While transmitting and with the INDUCTANCE control set the same as for Step 2, alternately adjust the TRANSMITTER and ANTENNA controls for a minimum SWR. Since the TRANSMITTER and ANTENNA controls interact, the two controls can best be adjusted by turning the TRANSMITTER control at a small increment at a time and then rotating the ANTENNA control for the minimum SWR.
   Repeat this until a minimum SWR is obtained.
8. If a SWR reading of 1:1 is not achieved, increase or decrease the INDUCTANCE control one position and repeat Step 7. CAUTION: If arcing between capacitor plates occured, increase or decrease the INDUCTANCE control one position and repeat Step 7. NOTE: If a SWR of 1:1 cannot be achieved at this point, repeat Step 7.for each INDUCTANCE control position. Again, do this in the tune mode or at low transmitter power.
9. After a minimum SWR is achieved, readjust the SWR swnsitivity by pushing the FWD/REF switch in and adjust for a full-scale deflection. Let out for the SWR reading. The transmitter power may now be increased up to 300W. The SWR sensitivity must be reset again after full power is applied. The TRANSMITTER and ANTENNA controls may need fine adjustment if the SWR is not 1:1 at high power. NOTE: On 160 M band, excessive heating or arcing may occur. Reduce the transmitter output power until it stops.
10. To read the transmitter output power, push the SWR/WATT control in and set it to either 30 or 300.
11. A SWR of 1:1 can occur from more than one set of control settings on the MFJ-945B. When a SWR of 1:1 is obtained, be sure to check the transmitter power and make sure that the transmitter power is relatively high. If the transmitter power has decrease substantially, try another INDUCTANCE control setting and repeat Step 7.
12. When using the MFJ-945C for receiving only, tune the MFJ-945C as described in Step 1 and Step 2.

## ADDITIONAL NOTES

The SENS/POWER control is factory calibrated for the 300W range. Do not reset the knob on this control. However, due to component tolerance when precision reading is desired, the 30W range can be recalibrated as follows: Push in the FWD/REF switch. Set the SENS/POWER control to 300, note the power level on the 300W scale, then rotate the control clockwise to read the same power level on the 30W scale. Mark the control setting for the recalibrated 30W range.

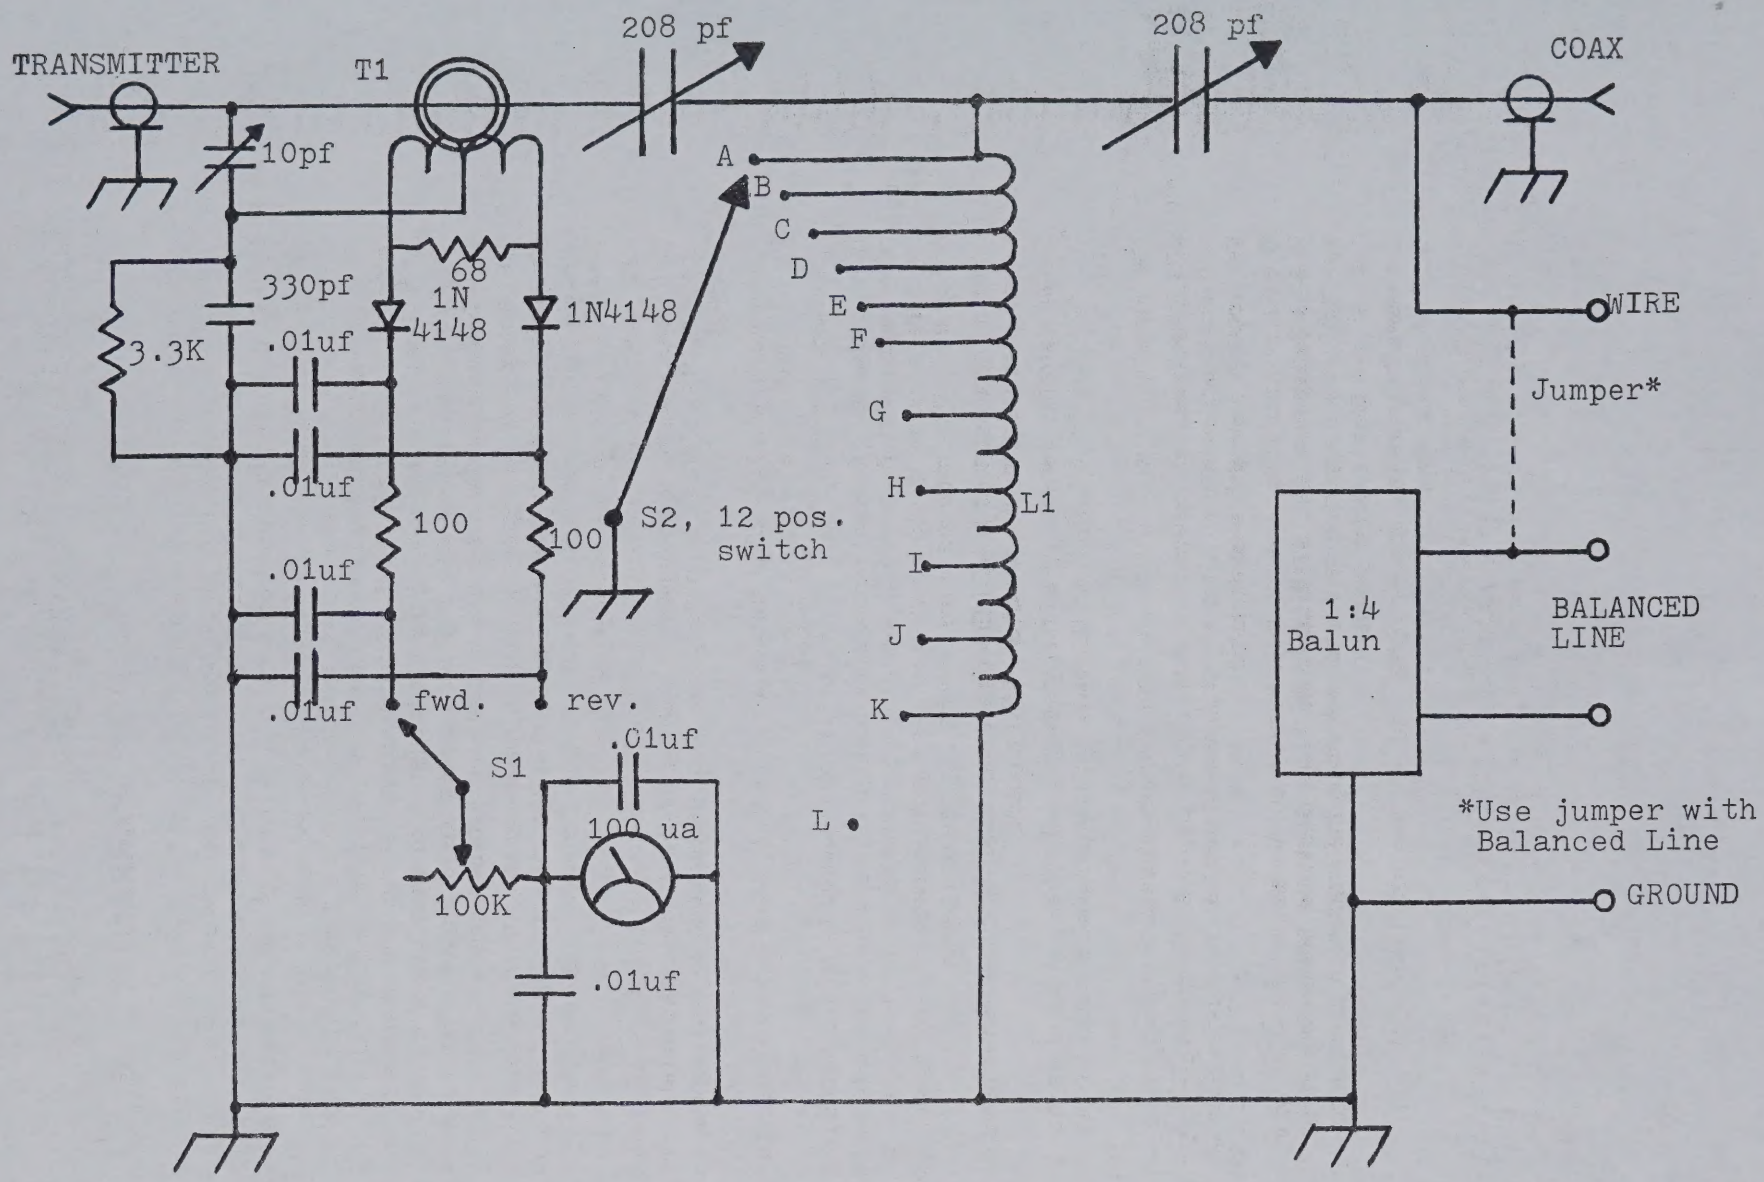


MFJ-945C CIRCUIT DIAGRAM

## FULL 12 MONTHS WARRANTY

MFJ Enterprises, Inc. warrants to the original owner of this product, if manufactured by MFJ Enterprises, Inc. and purchased from an authorized dealer or directly from MFJ Enterprises, Inc. to be free of defects in material and workmanship for a period of 12 months from date of purchase provided the following terms of this warranty are satisfied.

1. The purchaser must retain the dated proof-of-purchase (bill of sale, cancelled check, credit card or money order receipt, etc.) describing the product to establish the validity of warranty claim and must submit the original or a machine-reproduction of such proof-of-purchase to MFJ Enterprises, Inc. at the time of warranty service. MFJ Enterprises, Inc. shall have the discretion to deny warranty without dated proof-of-purchase. Any evidence of alteration, erasure, or forgery of proof-of-purchase shall be cause to void any and all warranty terms immediately.
2. MFJ Enterprises, Inc. agrees to repair or replace at MFJ's option without charge to the original owner any defective product provided the product is returned postage prepaid to MFJ Enterprises, Inc. with a personal check, cashier's check or money order for **$4.00** covering postage and handling.
3. MFJ Enterprises, Inc. will supply replacement parts free of charge for any MFJ product under warranty upon request. A dated proof-of-purchase and a **$4.00** personal check, cashier's check or money order must be provided to cover postage and handling.
4. This warranty is **NOT** void for owners who attempt to repair defective units. Technical consultation is available by calling (601) 323-5869.
5. This warranty does not apply to kits sold or manufactured by MFJ Enterprises, Inc.
6. Wired and tested PC board products are covered by this warranty provided **only the wired and tested PC board is returned.** Wired and tested PC boards installed in the owner's cabinet or connected to switches, jacks, cables, etc. sent to MFJ Enterprises, Inc. will be returned at the owner's expense unrepaired.
7. Under no circumstances is MFJ Enterprises, Inc. liable for consequential damages to person or property by the use of any MFJ product.
8. **Out-of-Warranty Service:** MFJ Enterprises, Inc. will repair any out-of-warranty product provided the unit is delivered prepaid. All charges will be shipped COD to the owner.
9. This warranty is given in lieu of any other warranty express or implied.
10. MFJ Enterprises, Inc. reserves the right to make changes or improvement in design or manufacture without incurring any obligation to install such changes upon any of the products previously manufactured.
11. All MFJ products to be serviced in-warranty or out-of-warranty should be addressed to **MFJ Enterprises, Inc., 921A Louisville Road, Starkville, Mississippi 39759, USA** and must be accompanied by a letter describing the problem in detail along with a copy of your dated proof-of-purchase.
12. This warranty gives you specific rights, and you may also have other rights which vary from state to state.